

Opticon Configuration Manual



For use with the EMSScanning system


If your scanner has lost it's time, you can follow these steps to restore it.

1. scan the following barcode




USB-VCP (Virtual Comm Port)


2. Plug your scanner into the computer
3. if you don't already have the Appload software, download it and install it below
<http://www.emsscanning.com/Opticon/Help/Apps/Appload.exe>
4. Run the Appload software with your scanner plugged in

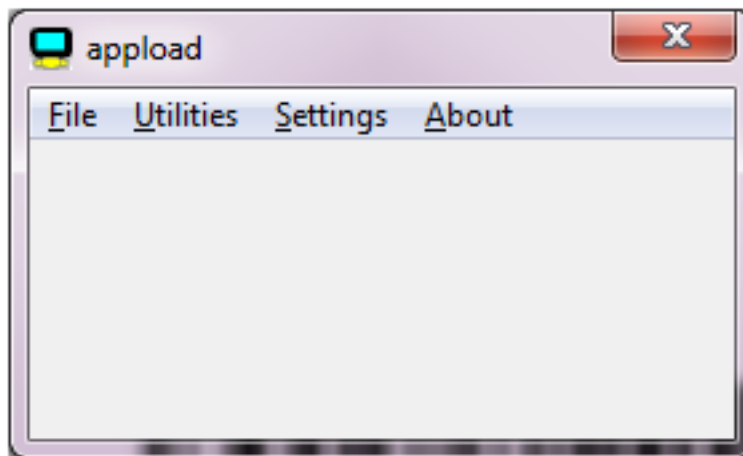


5. Click on Settings -> Port -> and click the port labeled 'Opticon USB Code Reader (Com##)'

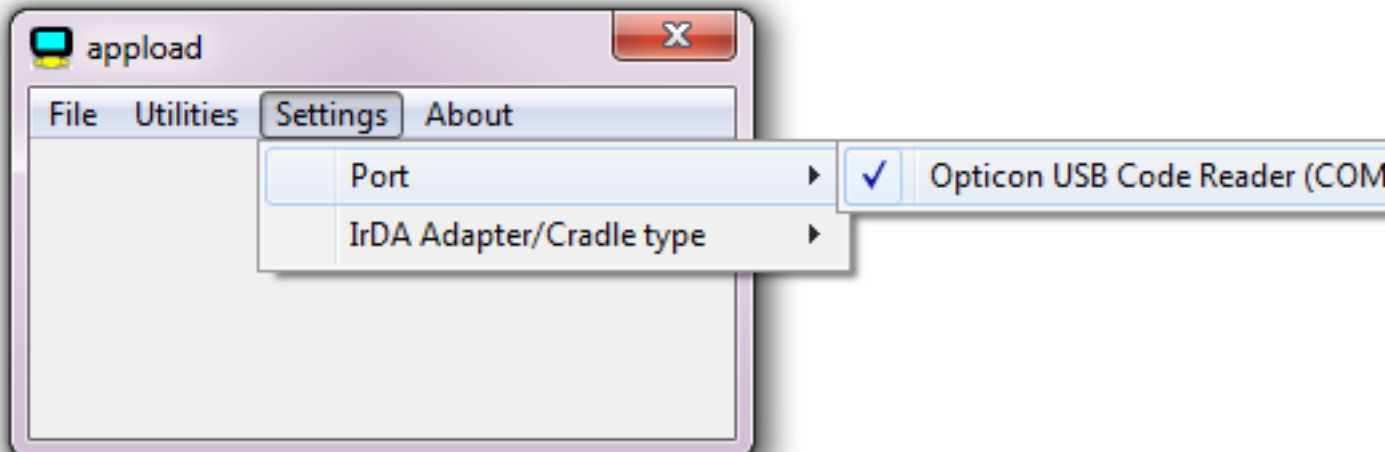

6. Click on Utilities -> 'Send Time'

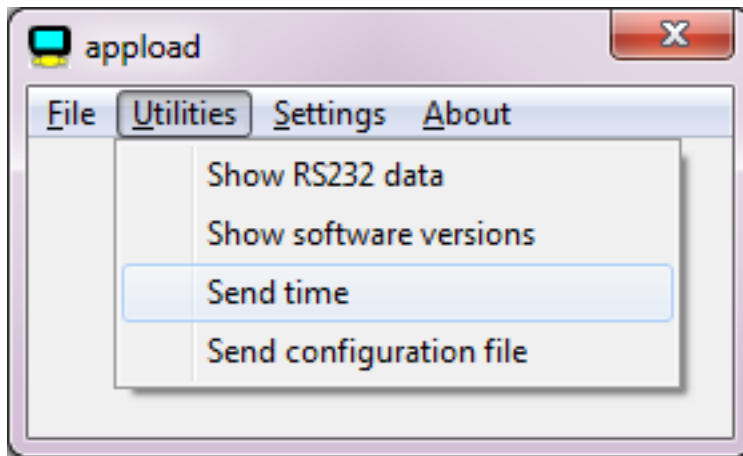

7. Click OK and close Apload and continue to Step 8

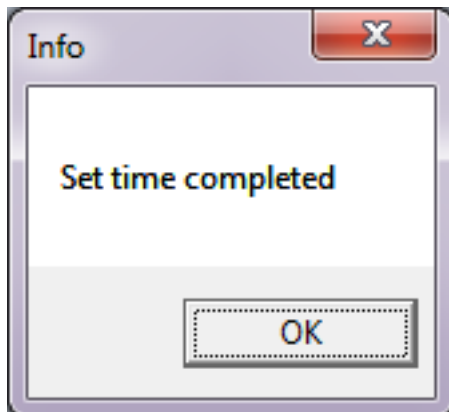

8. Unplug the scanner from the computer and scan the following barcode



USB-MSD (Mass Storage Drive)

Your scanner's timestamp is now configured correctly

Make sure to maintain a charge on your scanner to avoid losing the internal time

If your scanner has not been set up initially continue to the next page.

9. Scan the following three barcodes to set the Date, Time and Field separator format correctly



Date (YYYY-MM-DD)



Time (HH:MM:SS)



Field Separator (, Comma)

10. Scan the following five barcodes to set field columns correctly



Field 1 (Barcode)



Field 2 (Serial # of Scanner)



Field 3 (Time)



Field 4 (Date)



Field 5 (None)

Your Barcode scanner is now configured correctly

Make sure to maintain a charge on your scanner to avoid losing the internal time



Set



Enable Sound



High Low



Disable Sound



Single Tone



End